


Montage- und Bedienungsanleitung

RJ45CFXL-P1

RJ45 ONESIZE Buchse CAT5-7, 10GBit



Überprüfen Sie den Lieferumfang auf Vollständigkeit und Beschädigungen.

Buchse Pin Kennzeichnung	TIA / EIA T568A	TIA / EIA T568B
	1	Weiß/Grün
2	Grün	Orange
3	Weiß/Orange	Weiß/Grün
6	Orange	Grün
4	Blau	
5	Weiß/Blau	
7	Weiß/Braun	
8	Braun	

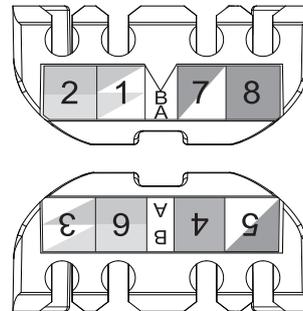


1.

Entfernen Sie 4 cm vom Kabelende des Kabelmantels. Legen Sie den Beidraht / Schirm zurück. Bei Verwendung eines AWG22 Kabels mit Paarschirmung, den Paarschirm 4 mm stehen lassen.

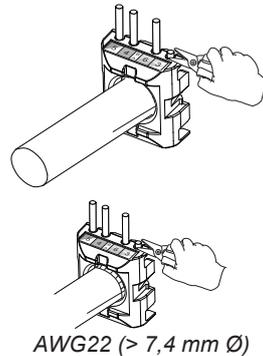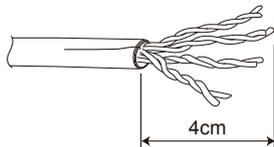


2.

Die Adern durch das Loch der Adernaufnahme bis zum Anschlag des Mantels führen und die Adernpaare nach dem aufgedruckten Farbcode ausrichten. Die Adern in die Adernaufnahme einlegen. Die überstehenden Adern bündig abschneiden.

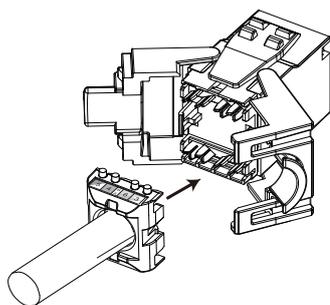


3.

Drücken Sie die Adernaufnahme auf das Gehäuse. Stellen Sie sicher, dass die Pfeile auf der Adernaufnahme und des Gehäuses gleich ausgerichtet sind.

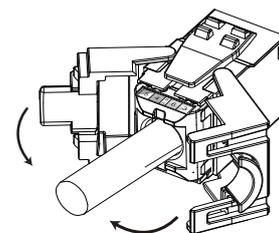

4.

Drehen Sie die Flügel aufeinander zu bis diese verschlossen verrasten.

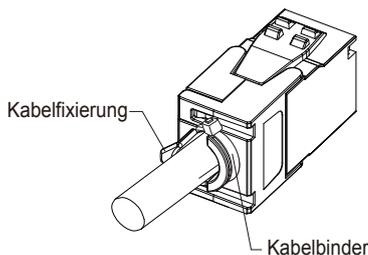

5.

Fixieren Sie das Kabel mit dem Kabelbinder. Bei Bedarf die Überstände des Beidrahts / Schirmes vorsichtig abschneiden ohne dabei den Kabelmantel zu verletzen.

Technische Änderungen vorbehalten.


Assembly and operating instructions

RJ45CFXL-P1



RJ45 ONESIZE Buchse CAT5-7, 10GBit

Check the scope of delivery for completeness and damage.


JACK PIN DESIGNATIONS	TIA / EIA T568A	TIA / EIA T568B
	1	White/Green
2	Green	Orange
3	White/Orange	White/Green
6	Orange	Green
4	Blue	
5	White/Blue	
7	White/Brown	
8	Brown	

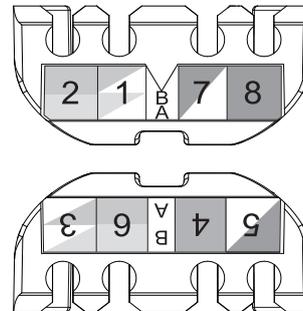


- 1.** Strip off 1.6 inch (4 cm) of cable jacket. Fold back the drain wire / screen. When using an AWG22 cable with a pair shield, leave the pair shield 0.15 inch (4 mm).

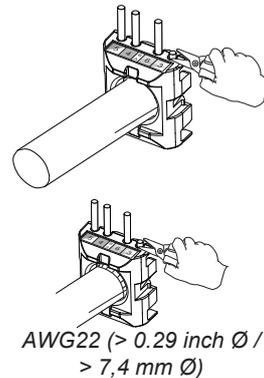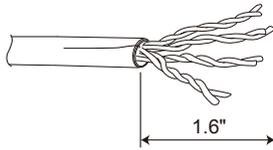


- 2.** Insert the conductors until stop into termination cap and fan out all four twisted pairs. Following the color coding printed on termination cap, position conductors into the slots and make sure the conductors are in the proper slots. Cut the ends of exceeding conductors close to the termination cap.

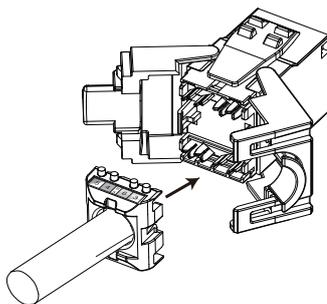

- 3.** Follow the direction instruction on termination cap and place the termination cap onto jack properly.

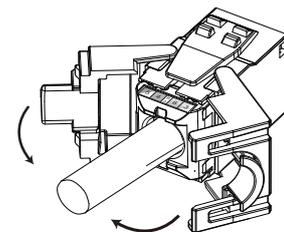

- 4.** Secure the hinged flaps by closing the flaps completely until they catch.

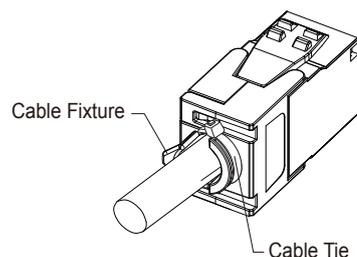

- 5.** Fasten a cable tie wrap to secure the cable fixture. If necessary cut the excess drain wire / screen without damaging the cable jacket.

Technical specification subject to change.